

USER GUIDE



More mobile than you're used to.

 MOTORAZR, Amp'd Edition



 
amp'd mobile™

ampd.com

1 | WELCOME

We are pleased that you have chosen the Motorola Amp'd Mobile V3m CDMA wireless phone.

- 1 Volume Keys** Adjust volume.
- 2 Left Soft Key** Performs functions defined in left display prompt.
- 3 Camera Key**
- 4 Send Key** Make and answer calls.
- 5 5-Way Navigation Key** Scroll through menus and lists. Press the **Center Select Key** to select highlighted items.
- 6 Accessory Port**
- 7 Voice Recognition Key** Press once to activate speaker independent voice recognition. Press and hold to record voice records.
- 8 Right Soft Key** Performs functions defined in right display prompt.
- 9 CLR Key**
- 10 Power/End Key** Turn phone on and off, and end phone calls.

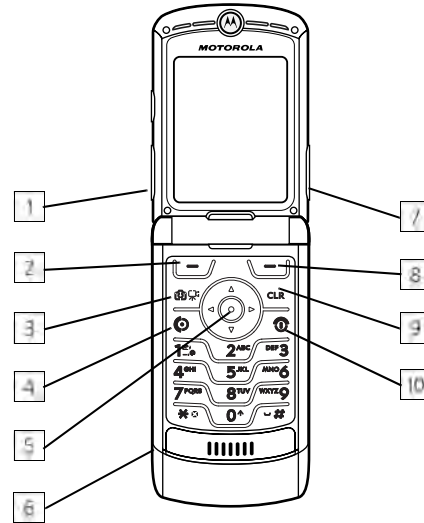

Motorola, Inc.

Consumer Advocacy Office

1307 East Algonquin Road

Schaumburg, IL 60196

www.hellomoto.com

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. All other product or service names are the property of their respective owners.

© Motorola, Inc., 2006.

CAUTION: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Manual Number: 6809507A44-O



CONTENTS

1 WELCOME 1

2 GETTING STARTED 5

About This Guide	5
Battery Tips	5
Installing the Battery	6
Charging the Battery	6
Turning Your Phone On	7
Making a Call	7
Answering a Call	7
Adjusting Volume	7
Change Call Alert	7
Viewing Your Phone Number	8
Installing and Removing the Memory Card	8

3 HIGHLIGHT FEATURES 9

Check It Out!	9
Taking and Sending a Photo	19
Recording and Playing Video Clips	20
Sending a Multimedia Message	22
Receiving a Multimedia Message	23
Bluetooth® Connections	23

4 LEARNING TO USE YOUR PHONE 25

Using the Display	25
Using the 5-Way Navigation Key	26
Using Menus	26
Entering Text	28
Using the External Display	33
Using a Removable Memory Card	33
Using the Handsfree Speaker	34
Turning On Airplane Mode	34
Changing a Code, PIN, or Password	34
Locking and Unlocking Your Phone	35
If You Forget a Code or Password	35

5 SETTING UP YOUR PHONE 36

Storing Your Name and Phone Number	36
Setting an Alert Style	36
Setting Answer Options	36
Setting a Wallpaper Image	36

Setting a Screen Saver Image	37
Setting Display Contrast	37
Setting Display Brightness	37
Adjusting the Backlight	37
Conserving Battery Power	37

6 CALLING FEATURES 38

Changing the Active Line	38
Redialing a Number	38
Using Automatic Redial	38
Turning Off a Call Alert	38
Calling an Emergency Number	38
Viewing Recent Calls	38
Returning an Unanswered Call	39
Using the Notepad	39
Attaching a Number	39
Calling with Speed Dial	39
Calling with 1-Touch Dial	40
Using Voicemail	40
Muting a Call	40
Using DTMF Tones	40

7 PHONE FEATURES 41

Menu Map	41
Calling Features	42
Messaging	42
Contacts	43
Personalizing Features	46
Menu Features	49
Dialing Features	50
Call Monitoring	50
Handsfree Features	51
Data and Fax Calls	51
Bluetooth® Wireless Connections	52
Network Features	53
Personal Organizer Features	53
Security	55
News and Entertainment	55

8 SERVICE AND REPAIRS	56
9 SPECIFIC ABSORPTION RATE DATA	57

2 | GETTING STARTED

CAUTION: Before using the phone for the first time, read the important safety and legal information in the separate legal information included in the box.

About This Guide

This guide describes the basic features of your Motorola wireless phone.

Optional Features

This label identifies an optional network or subscription-dependent feature that may not be offered by all service providers in all geographical areas. Contact your service provider for more information.

Optional Accessories

This label identifies a feature that requires an optional Motorola Original™ accessory.

Battery Tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and battery chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.
- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.
- When storing your battery, keep it uncharged in a cool, dark, dry place.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.

- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.

Contact your local recycling center for proper battery disposal.

Warning: Never dispose of batteries in a fire because they may explode.

 
Before using your phone, please read the battery safety information in the *Safety and General Information* section included in the separate legal guide included in the box.




Installing the Battery

Your phone is designed to use only Motorola Original batteries and accessories.


1. Press in the battery door, release latch and remove the battery door.

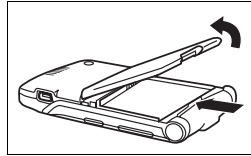

 
2. Follow arrows to insert battery.

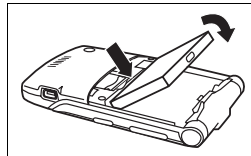

 3. Replace the battery door.

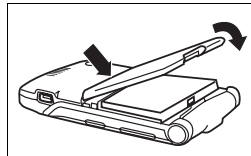

 4. Close the battery door.

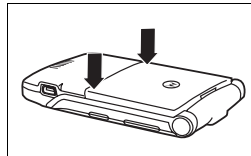


Charging the Battery


New batteries are shipped partially charged. Before you can use your phone, install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

To charge the battery:

 1. Insert the charger into the USB connector on your phone as shown.

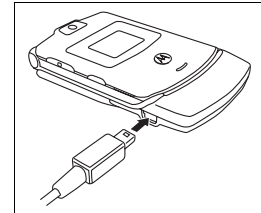

 2. Plug the other end of the charger into the appropriate electrical outlet.

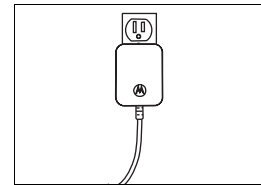

3. When your phone indicates **Charge Complete**, remove the charger.

 
Tip: You can safely leave the charger connected to your phone after charging is complete. This will **not** damage the battery.

Note: When you charge the battery, the battery level indicator in the upper right corner of the display shows how much of the charging process is complete. At least 1 segment of the battery level indicator must be visible to ensure full phone functionality while charging.


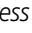


Turning Your Phone On

1. Open your phone.
2. Press and hold the power key for 3 seconds.
3. If necessary, enter your 4-digit unlock code (the last 4 digits of your phone number) and press the right soft key to unlock the phone

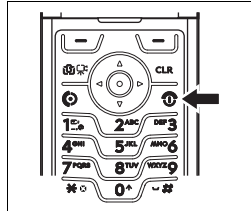

Making a Call

1. Press keypad keys to dial the phone number.
2. Press  to make the call.
3. Press  to end the call and “hang up” the phone when you are finished.

-or-

4. Close the flip.

Tip: You can set the phone to answer calls when you open the flip.

To activate, press **Left Soft Key (Menu) > Settings > In-Call Setup > Answer Options > Open To Answer.**

Tip: You can set the phone to answer calls when you open the flip. To activate, press **Left Soft Key (Menu) > Settings > In-Call Setup > Answer Options > Open To Answer.**


Answering a Call

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

- Press the left soft key to answer a call.

-or-

- Press .

- Press  to end the call and “hang up” the phone when you are finished.

-or-

- Close the flip.

Adjusting Volume

Press up or down on volume keys to:

 
 
- increase or decrease earpiece volume during an active call
- temporarily silence an incoming call alert
- increase or decrease the ringer volume setting when the home screen is visible (flip must be open)

Tip: At the lowest volume setting, press the down volume key once to switch to vibrate alert. Press it again to switch to silent alert. Press the up volume key to cycle back to vibrate alert, then ring alert.

Change Call Alert


Phone Flip Open

In the home screen, press the down volume key to switch to lower call alert volume, then switch to vibrate and, finally, silent alert. Press the up volume key to cycle back from silent alert to vibrate and then to the lowest alert volume setting.

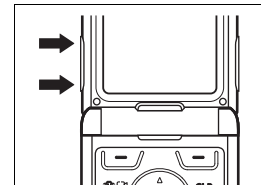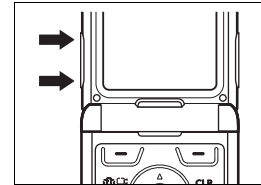

Phone Flip Closed

 Press the up or down volume key, then press the smart/speakerphone key to scroll through the alert styles: **Loud**, **Soft**, **Vibrate**, **Vibe** then **Ring**, and **Silent**. The alert styles are shown on the external screen.

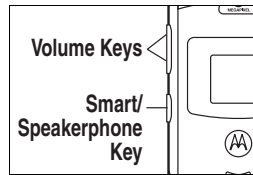

After scrolling to the desired alert style, press the up or down volume key to save the setting and return to the home screen.

Viewing Your Phone Number

To view your phone number from the home screen, press **Left Soft Key (Menu) > Phone Status > My Tel. Number**.

While you are on a call, press **Left Soft Key (Options) > My Tel. Number**.

Installing and Removing the Memory Card

You can install a removable memory card in your phone. This card provides additional storage for pictures, animations, sounds, and video clips.

 
 
CAUTION: Do not bend or scratch your memory card. Avoid exposing your memory card to static electricity, water, or dirt.

Installing the Memory Card

CAUTION: When you are not actively inserting or removing a memory card, keep the cover closed on the card slot to prevent damage.

With your phone powered off:

1. Press in the battery door, release latch, and remove the battery door.
2. Remove the battery.
3. Slide the memory card out of the card slot as shown. Be sure the card is fully inserted.

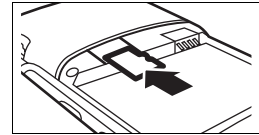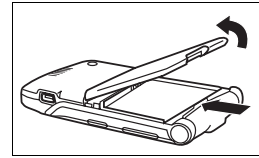

4. Replace the battery and the battery door.

 
 
Removing the Memory Card

CAUTION: Do not remove the memory card while reading or writing files. Otherwise, it could be damaged.

CAUTION: When you are not actively inserting or removing a memory card, keep the cover closed on the card slot to prevent damage.

With your phone powered off:

1. Press in the battery door, release latch, and remove the battery door.
2. Remove the battery.
3. Slide the memory card out of the card slot as shown.

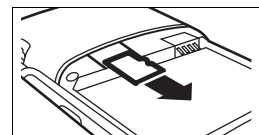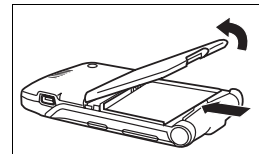


4. Replace the battery and the battery door.

3 | HIGHLIGHT FEATURES

You can do much more with your phone than make and receive calls! This section describes some of your phone's highlights.

 Check It Out!

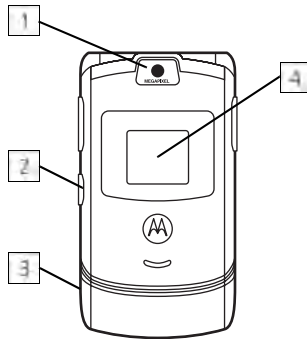


- 1 Camera Lens** Take photos and videoclips.
- 2 Smart/Speakerphone Key** Take self-portrait photo with camera when flip is closed.
- 3 Accessory Connector Port** Insert charger and phone accessories.
- 4 External Display** View incoming call information, use as camera viewfinder when flip is closed.

Amp'd Live™

Amp'd Live™ is a whole new world of mobile entertainment. In addition to hot phone features like messaging and photo and video camera, you can now:

- watch your favorite videos and TV clips
- play your favorite 3D multiplayer games
- download your favorite music, the hottest ringtones, wallpapers, and more

How to Start

Ready to get started? Just press the **Center Select Key**  on your phone.

What Can You Do?

The Amp'd Live™ menu is set up by topic, so finding the things you like couldn't be easier.

What's Hot

Just like the real world, the Amp'd Live™ world is dynamic. New music videos, songs, ringtones, and other cool stuff are released all the time. Think of **What's Hot** as the new-release and hottest-picks corner of Amp'd Live™. Check it often to stay up-to-date.

In **What's Hot** you'll find:

- **Daily Video**—Catch new video releases and other must-see flicks.
- **Hot Bundles**—Get specially selected combinations for hot ringtones and wallpapers.
- **Artist Features**—Check here for new releases from your favorite artists.
- **Cutting-Edge Gear**—Find the hottest accessories for your phone (coming soon).



- **Sizzling Apps**—Stay ahead of the curve with the most popular games and applications.

TV and Radio

Watch TV right on your phone. You'll find your favorite channels from MTV, VH1, E!, Fox Sports, Comedy Central, ABC, E!, Discovery, A&E, Style Network and more.

Listen to Radio on your phone. You'll find Deep Indie, The Joint, MTV Radio and more.

Music

With an Amp'd Mobile™ phone and Amp'd Live™, you have both the music player *and* a music store right in the palm of your hand. Browse the store, then buy and play your favorite downloads anywhere. And, with Amp'd Live, you can check out music videos, news, live broadcasts, and even never-before-seen exclusives.

- **Music, Video, Ringtones**—From old-school classics to today's Top 10 charts, tons of songs, videos, and ringtones are ready to be downloaded, anytime, anywhere.
- **Finding Music**—Search for a song or music video by artist, title, or genre.
- **Performances**—Watch the hottest performances from the best in music television.
- **Live Events**—See what your favorite band does backstage or what the hottest artists are up to in the studio. Check you exclusive behind-the-scenes sneak peeks and concerts—streamed live to your phone.

Tones & Graphics

You can do so much more than just change ringtones to make your phone reflect your own personality.

- **Ringtones**—Choose from tons of choices in our huge music library.

- **Wallpaper**—Change the background image on your phone. Choose from massive selection that includes your favorite artists, and more.

Sports

Sports fans rejoice! Checking the final score is a snap with an Amp'd Mobile™ phone. Get your sports news from the most reliable sources. Keep up on all your favorites, including football, baseball, basketball, hockey, fighting, and auto racing and don't forget to check out the sports high rollers room.

- **ESPN**—Catch highlights, analysis, breaking news, and more. Get ESPN anytime, anywhere.
- **FOX Sports**—Get news from around the leagues, scores, schedules, standings, and betting odds. *FOX Sports Mobile* is your sports lifeline.
- **Pro Leagues**—Stay on top of your favorite teams with our MLB, NBA, NHL, and NFL channels.
- **Fights**—Watch your favorite brawlers battle it out Live in the *Ultimate Fighting Championship*.
- **Racing**—Keep the adrenaline pumping with Import Tuner, Supercross, Speed and more.
- **Action Sports**—View Wave Watch (Surf Cams), FUEL TV, and mobile versions of *Snowboarding*, *Surfer*, *Surfing*, *Skateboarder*, *Bike*, and *Powder* magazines.
- **Fantasy & Gaming**—Fantasy sports go mobile. Check out player profiles, news, injury reports, LIVE stats, and more—anytime, anywhere.
- **Danny Sheridan Odds**—Get the spread on your favorite games and mock-ups from acclaimed sports analyst and *USA Today* laminator Danny Sheridan.



Entertainment

Turn your phone into your own portable media center! On Amp'd Live™, you'll find videos, the best of network and cable TV, cool Web sites, your favorite entertainment rags, comics, and even live broadcasts. Check out the channels you now have at your fingertips:

- **Viral Videos**—Feed your appetite for humor with Break.com, College Humor, and more.
- **Movies**—Check out the latest movie trailers and film reviews at RottenTomatoes.com.
- **TV**—Get all your favorite TV shows right on your phone. You'll find popular shows from ABC, E!, NBC, Cartoon Network's *Adult Swim*, the WB, MTV, VH1, CMT, Comedy Central, SPIKE TV, LOGO, and more.
- **Internet**—This is your direct connection to the internet. Access AOL, MSN, Yahoo!, The Smoking Gun, eBay Mobile, Impacters, and all your favorite Web portals.
- **Entertainment News**—With access to *MTV News*, *E! News Daily*, *Extra*, *The Daily Show with John Stewart*, *The Onion*, and more, you'll stay up to date on the latest celebrity news, gossip, and satire.
- **Stand Up**—Need a laugh? You'll find *Comedy Time*, *America's Best Mobile Fix*, and *Just For Laughs*.
- **Animation**—Enter the whacky worlds of Scooby Doo, Hanna-Barbera, DC Comics, Looney Tunes and more. Remember, you're never too old to watch cartoons.
- **The Vault**—Find all of your favorite uncensored adult brands in our password-protected Vault.

Games


Down time is now gaming time. From 3D action and sports games to arcade classics and mind-boggling puzzles, you'll find dozens of ways to entertain yourself.

- **Games Connect**—Meet, interact, and compete with other online gaming subscribers worldwide.
- **Action**—Get *Prince of Persia*, *Tom Clancy's Splinter Cell*, *Rainbow Six*, *Brothers in Arms*, *King Kong*, *Independence Day*, and many more—all in 3D.
- **Sports**—When you're not playing Amp'd Mobile™ exclusives like *Snowboarding Travis Rice 3D* and *Asphalt: Urban GT 3D*, you can download *3D Need for Speed: Most Wanted*, *Tony Hawk Underground 3D*, or *3D Madden 2006*, to name just a few.
- **Arcade**—Go old-school with classics like *Snood 2*, *Pitfall: Glacier and Jungle*, *Joust 2*, and *Defender 2*.
- **Strategy**—Strain your brain with *Donald Trump's Real Estate Tycoon*, *3D Pool*, *Backgammon*, *Ethel*, *Chess*, *Cribbage*, *Reverse*, and *Mahjong*.
- **Puzzles**—Play *TV Guide Crosswords*, *Trivia*, *Word Search*, *Cryptogram*, *HangMan*, *Microliters*, and more.
- **Lifestyle**—Enjoy *3D Pet Care (Tam a got chi)*, *Busting Bar Trivia*, *Stack-Sum*, *Diva Dee Dancing*, *Mahjong Puzzle*, *Breakout Bears*, *Message in a Garden*, and *Bubble Ducky*.
- **Casino**—Coming soon... *Blackjack*, *Poker*, *Roulette*, *Video Poker*, *Video Slots*, *Hill*, *Virtual Resurfacing*, *Keno*, and *Bingo*.



News & Lifestyle

Use Amp'd Live™ to keep up to date with daily news, weather, traffic, and more—everything you need to stay in the know.

- **News & Info**—Get the latest breaking headlines from trusted sources like NBC News and *The New York Times*.
 - **Find It**—Need directions? Impacters will get you there. If you're looking for weather and traffic information, there are Accu-Weather and Rand McNally. And for restaurant and movie information, check out *Vindigo City Guide* and *Movie Goer*.
 - **Dating**—Get your heart pounding with *HurryDate*.
 - **Health & Fitness**—Keep in shape with exercise routines and healthy recipes from *Wireless Workouts* and Food Network.
1. Press the **Center Select Key**  to enter Amp'd Live™.
 2. Select an item from the menu. Depending on the item, there may be multiple levels of choices.
- **Culture**—Exclusive videos from *FHM*, *Motet*, and *VIBE*, as well as top content from other leading magazines.


How to Find Stuff

You have two ways to find stuff in Amp'd Live™:

- browse by category
- search for a specific item


Browsing Amp'd Live™

As you explore the Amp'd Live™ universe, you'll notice that it's pretty easy to get around. Here's how it works:

1. Press the **Center Select Key**  to enter Amp'd Live™.
2. Select an item from the **Category** list. Depending on the item, there may be multiple pages of choices.

Searching Amp'd Live™

If you know exactly what you want to find, use **Search**:

1. Press the **Center Select Key**  to enter Amp'd Live™.
2. Press the **Left Soft Key**, then select **Search**.
3. Select one of the three available drop down menus (*Type*, *Category*, or *Keyword*).
4. Select the **Category** box, and choose the category that you wish to search for your content.
5. Enter a description of the item.
6. Press **Search**.

If you don't find what you want the first time, don't give up. Try again, using a different item description or category.

Decode the Ratings


Whether you’re looking for adult content or something less racy, all Amp’d Live™ items have a rating decal to help you choose correctly.

Rating	Description
AA	All Audiences —Grandma won’t be offended.
GC	General Content —May contain mild language, violence, comic mischief, and/or suggestive themes.
MC	Mature Content —May contain strong language, depictions of violence, sex, and/or substance abuse.
AO	18+ Adult Only —May contain uncensored depictions of violence, nudity, or sex.
Parental Advisory — Explicit Content	Recordings identified with this warning contain strong language or depictions of violence, sex, or substance abuse. Parental discretion is advised.

Making Purchases

Try Before You Buy

The Amp’d Mobile™ **Preview** feature lets you sample any of our items before you buy. Here is how it works:

1. Press the **Center Select Key**  to enter Amp’d Live™.
2. Find an item you want to try.
3. Select **Previewed** to check out the item. If you pick a bundle, you can preview each item in the bundle.
4. If you want to purchase the item, select **Buy**.
-or-

*If you don’t want to purchase the item, or if you want to check out some other choices before you decide, press **Back** and continue looking.*

Buy Stuff



Amp’d Live™ offers a variety of ways for you to load up on entertainment. Mix and match to create your own blend of permanent and temporary ownership.

- **Own It (Download)** puts a copy of the item on your phone so you can view or play it whenever you want, forever. Copy protection laws still apply, so you may not be able to send the item to your friends.
- **Buy Access (Subscription)** gives you unlimited access to the item during your subscription period. Subscriptions are billed monthly and are great for sampling a variety of items. Just remember that the subscription items change all the time (like an e-fine or a premium TV channel), so you find something you *must* have, you should buy that item and download it permanently.
- **On Demand (Streaming)** plays the entire item on your phone, but only one time. It’s just like pay-per-view from your cable or satellite TV service.

Note: If a download is interrupted, you will not be charged for the item. You can always go back and purchase the item again.

Enjoy Your Stuff

After you download or subscribe to items, go to **My Stuff** to play your music, videos, and games, and to run your applications.

1. Press the **Center Select Key**  to enter Amp’d Live™.
2. Press  left to open **My Stuff** or go to **Menu > My Stuff**.

Enjoy Your Music

After you download a song or start a music subscription, use the Media Player to play your music.

You can select any of the following methods to play your music:

Pick Songs









- 1. Go to **My Stuff**.
- 2. Select **Music**.
- 3. *Select the method you want to use to play your songs (see the table below).*

Option	Description
Shuffle	Play all songs on your phone in random sequence.
Artist	Display an alphabetical list of artists whose songs are on your phone. You can select the artist you want to hear. After you select the artist, you can play all songs by that artist, a specific album, or a single song.
Album	Display an alphabetical list of the albums on your phone. Just select the album you want to hear. You can then play all songs on the album or a specific song.
Song	Display an alphabetical list of all songs on your phone. Select the songs you want to play.
My List	Display all the songs that you chose to Add2MyList from anywhere in Music.
Playlist	Display all playlists on your phone. Select a playlist, then play all songs on that playlist or only a specific song.

 

Using the Media Player

After you select the songs you want to play, use the Media Player to control playback.

Option	Description
Play/Pause	Press the Center Select Key  to play a song. While a song is playing, press  to pause it. Press  again to continue playing it.
Stop	Press  up to turn off the song. The next time you play the song, it will start at the beginning.
Next	Press  right to skip ahead to the next song.
Restart	Press  left to restart a song from the beginning.
Previous	Press  left <i>twice</i> to skip back to the previous song.
Fast Forward	Press and hold  right to fast-forward the song.
Rewind	Press and hold  left to scroll backwards in the song.
Volume	Press your phone's volume keys (on the left side of the phone) up and down to adjust volume levels.



Organize Your Music

My Stuff includes a built-in playlist called **MyList**. You can change **MyList** by adding, deleting, or moving songs on your phone. You can create and manage additional playlists on your computer and then copy them to your phone.

*To add a song to **MyList**:*

1. Go to **My Stuff**.
2. Select **Music**.
3. Find the song you want to add.
4. Select **Menu**.
5. Select **Add2MyList**.

*To delete or move a song in **MyList**:*

1. Go to **My Stuff**.
2. Select **Music**.
3. Select **Playlist**.
4. Select **MyList**.
5. Select **Menu**.
6. Select the appropriate command to make your changes.

Move Up moves the current song up one slot in **MyList**.


Move Down moves the current song down one slot in **MyList**.

Delete removes the current song from **MyList**.

Play Videos


Use the Media Player to play downloaded videos.

1. Go to **My Stuff**.
2. Select **Video**.

3. Select the category where you expect to find the video you want to play.
4. Select the title you want to play.
5. Press the **Center Select Key**  to play the video. Use the Media Player to control video playback.


Play Games

When you're ready to play a downloaded or subscription game, you'll find it in **My Stuff**.

1. Go to **My Stuff**.
2. Select **Games and Applications**.
3. Select the category where you expect to find the game you want to play.
4. Select the title or subscription you want to play.
5. Press the **Center Select Key**  to start the game.


Run Applications

To run an application you have installed, downloaded, or subscribed to:

1. Go to **My Stuff**.
2. Select **Games and Applications**.
3. Select the category where you expect to find the application you want to run.
4. Select the title or subscription you want to run.
5. Press the **Center Select Key**  to run the application.

Change Tones & Graphics

Tones & Graphics is where you personalize your phone by setting its ringtone, wallpaper, and screen saver:

1. Go to **My Stuff**.
2. Select **Tones & Graphics**.
3. Select the type of item you want to change.
4. Select the item you want to use.
5. Press the **Center Select Key**  to preview the item.


*Tip: To stop a preview before it completes, press **OK**.*

-or-

Press the **Assign** Soft Key to use the selected item.


Access Your Subscriptions

To view or play something to which you've subscribed:

1. Go to **My Stuff**.
2. Select **Subscription**.
3. Select the subscription you want to view or play.
4. Select the item you want to use.
5. Press the **Center Select Key**  to launch the selected item.

Cancel a Subscription

You can cancel a subscription directly from your phone or by going to www.ampd.com. To cancel from your phone:

1. Go to **My Stuff**.
2. Select **Subscription**.
3. Select the subscription you want to cancel.
4. Select **Menu**.
5. Select **Unsubscribe**.
6. Press the **Center Select Key**  to confirm the cancellation.

See Details for an Item.

1. Go to **My Stuff**.
2. Select the item for which you want to see details.
3. Select **Menu**.
4. Select **Properties**.



My Stuff Menu Commands Quick Reference

Command	Action
Add2MyList	Add the selected item to MyList .
Unsubscribe	Cancel the subscription for the selected item.
Delete	Delete the selected item from MyList or your phone (depending on the item selected).
Shuffle	Play songs on current playlist in random order.
Properties	Show details for the selected item such as title, artist, album, genre, rating, and price.
Home	Go to the My Stuff main menu.
Help	Display helpful hints and explanations for the current screen.

Need Help for Amp'd Live™?

Commonly Asked Questions

How can I quickly return to the Amp'd Live™ or My Stuff main menu?

1. Select **Menu**.
2. Select **Home**.

I selected On Demand/Streaming. Why can't I restart or replay the item?

You can view or play On Demand/Streaming items only once.

It's like a pay-per-view movie from your cable or satellite TV service. If you want to use an item more than one, select the **Download** option instead.


How do I edit playlists?

You can edit only the built-in **MyList** playlist from your phone. Edit your other playlists using your computer, then place an updated copy on your phone.

Where can I view details about an item?

1. Go to **My Stuff**.
2. Select the item for which you want to see details.
3. Select **Menu**.
4. Select **Details**

How do I cancel a subscription?

1. Go to **My Stuff**.
2. Select **Subscription**.
3. Select the subscription you want to cancel.
4. Select **Menu**.
5. Select **Unsubscribe**.
6. Press the **Center Select Key**  to confirm the cancellation.


Get Help Online

To get help online, go to www.ampd.com and select **Customer Care** at the bottom of the page.

 
Customer Care


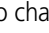
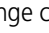
To reach an Amp'd Mobile™ Customer Care representative, call 1-866-811-0091, or dial 611 from your Amp'd Mobil™ phone. Otherwise, go to www.ampd.com.

Taking and Sending a Photo

From the home screen, press the camera key  to activate your phone's camera.

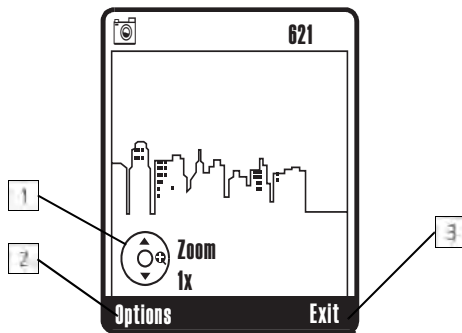


The active viewfinder image appears on your phone's display.



- 1 Displays when you press  to change camera settings. Press  up or down to zoom in or out on image, change settings for lighting conditions, style, and zoom. Then press  left or right to change levels.
- 2 Press the **Left Soft Key** to view **Options** menu.
- 3 Press the **Right Soft Key** to return to previous screen.

Press the **Center Select Key**  to take a photo.


Point the camera lens at the photo subject, then:

1. Press the camera key  to take a photo.
-or-
Press the **Center Select Key** .
2. Press **Options** to view storage options: **Store Only**, **Apply as Wallpaper**, or **Apply as Screensaver**.
If you choose to store the photo, continue to step 3.
-or-
Press the  key to delete the photo and return to the active viewfinder.
3. Press **Send** to *Send in Message*.
4. Press **Select** key to perform the storage option of your choice (**Store Only**).


Pictures Menu Options

When the camera is active, press **Options** to open the **Picture Menu**. The menu can include the following options:


Taking a Self Portrait


1. Press , then close the flip.
-or-
With the flip closed, press and hold the camera key (below volume keys) on the side of the phone.
2. Hold the camera with the lens aimed at yourself. Use the external display as a viewfinder.
3. Press the key below volume keys on the side of the phone to capture the photo.



Option	Description
Go To Pictures	View pictures and photos stored on your phone.
Switch Storage Device	Save the photo on optional memory card (TRANS-T-Flash), if installed, or on phone memory (Phone).
Auto-Timed Capture	Set a timer for the camera to take a photo.
Flash On	Set a camera light for photos taken in settings with low light.
Adjust Contrast	Increase or decrease contrast.
Image Style	Press  right and left to select Color , Black & White , Antique , or Negative .
Capture Title	Assign a name to a captured photo.
Pictures Setup	Open the setup menu to adjust picture settings (Lighting Conditions , Resolution , Shutter Tone).
View Free Space	See how much memory remains for storing photos.

 Recording and Playing Video Clips

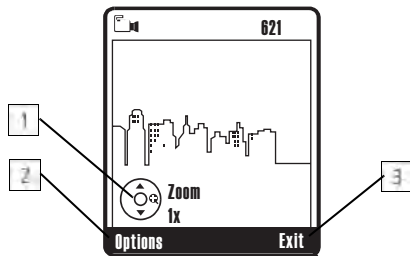

- 1** Displays when you press  to change video settings. Press and hold the **Camera** button, then release. This will navigate between picture and video mode.

2 Press **Left Soft Key** to view **Options Menu**. Press **Options** to open **Videos Menu**.

3 Return to previous screen.

Press the **Center Select Key**  to start recording.

To access the video option:




1. Press **Menu**.
2. Select **Camera & Pics**.
3. Select **Video Camera**.
4. Select **Options**.

The **Videos Menu** can include the following options:

Recording a Video



Press **Menu** > **Camera & Pics** > **Video Camera**



1. Aim the phone at the scene you want to record.
2. Press the **Center Select Key**  to begin recording.
-or-
Press **Options** to open the **Videos Menu** to select other options as described in the table below.
3. Press the **Stop** key to stop recording, or press the **Center Select Key**  while recording to stop.
4. Press the **Options** key or the **Center Select Key**  to save the captured video clip or press the **Send** key to add a message attachment.

Option	Description
Go To Videos	View video clips stored on the phone.
Switch Storage Device	Save the video clip on memory card (TRANS-T-Flash), if installed, or on phone memory (Phone).
Video Setup	Adjust settings for: Auto Repeat, Timer, Video Length, Lighting Conditions, Recording Sound, Status Icons
View Free Space	View how much memory remains for storing multimedia objects.

Playing Video Clips

1. Press  up or down to pause or stop the video clip.
2. Press  left or right to rewind or fast forward through the video clip.
3. Press **Options** to open **Videos Menu**.



Note: Videos are preset to a default recording length. This length can be extended in the **Videos Menu**.


You can send and receive video clips in multimedia messages.

Press **Menu > Camera & Pics > Videos**

To play a video clip stored on your phone:

1. Press  to scroll to the video clip.

2. Press the **Center Select Key**  to start video clip playback.
3. Press  to control the video (move up or down).
-or-
Press **Options** to view video information.
-or-
Press **Options** to open the **Videos Menu** to select other options as described in the table below.

Note: When you view a video clip in a multimedia message that does not contain text, pressing  right may display a blank screen or restart the video clip.

The **Videos Menu** can include the following options:



Option	Description
Send in Message	Send the clip in a multimedia message.
Switch Storage Device	Save the video clip on optional memory card (TRANS-T-Flash), if installed, or on phone memory (Phone).




Option	Description
New	Capture a new video clip.
Details	View information about the highlighted video clip.
Rename	Assign a different name to the video clip.
Delete	Delete the highlighted video clip.
Move	Move highlighted video.
Copy	Copy highlighted video.
Mark	Mark 1 or more video clips that you want to move, copy, or delete.
Mark All	Mark all video clips to be moved, copied, or deleted.
Categories	Create a new category, or view video clips in a selected category.
Assign to Category	Assign a video clip to a defined category.
Videos Setup	Adjust settings for: Auto Repeat, Timer, Video Length, Lighting Conditions, Recording Sound, Status Icons
View Free Space	View how much memory remains for storing multimedia objects.

Sending a Multimedia Message






A *Multimedia Messaging Service* (MMS) message contains one or more slides with text and media objects (including photos, pictures, animations, sounds, voice memos, and/or video clips). You can send the multimedia message to other wireless phone users, and to email addresses.

Press **Menu > Messaging > Create Message > New MMS Message**

1. Press keypad keys, then **Center Select Key**  to enter recipient's phone number or email address.
or
Contacts key, , then **Add** key and **Done** key to open **Contacts**, then scroll to and select 1 or more existing **Contacts** entries.

2. Press keypad keys to enter slide text.
3. Press **Options** to open the **PIX Menu**.
4. Press  to select **Insert**.
5. Press **Select** key to display a list of items you can insert.
6. Press  to scroll to a type of object to insert.
7. Press **Select** key to select the object type.
8. Press  highlight the object you want.
9. Press **Select** key to insert the object.
To add another slide to the message, continue.
To send the message, go to step 19.



10. Press **Options** to open the **PIX Menu** to insert a new slide.
11. Press **Select** key to display a list of items you can insert.
12. Press  to scroll to **Insert New Page**.
13. Press **Select** key to insert a new slide after the current slide.
Repeat steps 2 through 9 to enter contents for the new slide.
14. Press the **Center Select Key**  to store the message.
15. Press  to scroll to **Subject**.
16. Press **Change** key to select **Subject**.
17. Press keypad keys to enter the subject.
-or-
Press **Quick Text** key, then **Center Select Key**  and **Select** key to open the Quick Text list, then scroll to and select a Quick Text as a subject.
18. Press the **Center Select Key**  to store the subject.
19. Press **SEND** key to send the message.
-or-
Press **Options** to send the message later, view message details, save the message in the drafts folder, or cancel the message.

Receiving a Multimedia Message

When you receive a multimedia message or letter, your phone displays the  (message waiting) indicator and a **New Message** notification, and sounds an alert.

Press **READ** key to open the message.

Multimedia messages that you receive can contain different media objects:

- Photos, pictures, and animations are displayed as you read the message.
- A sound file, or video clip begins playing when its slide is displayed. Use the volume keys to adjust the volume as the sound file or video clip plays.
Note: In a multimedia letter, you may have to highlight an indicator in the text to play a sound file or video clip.
- Attached files are added to the end of the message. To open the attachment, highlight the file indicator/ filename and press the **View** key (image file type), **Play** key (sound file or video clip), or **Open** key (object such as **Contacts** or datebook entry, or unknown file type).

Note: File names for stored multimedia objects can not exceed 36 characters.

Bluetooth® Connections

Your phone supports Bluetooth® connections. You can connect your phone to a Bluetooth® headset or car kit, or connect to another device to exchange and synchronize files.

Your phone currently supports the following Bluetooth profiles:

- headset (optional Motorola Original™ accessory)
- Handsfree Car Kit (optional Motorola Original accessory)

For more information about Bluetooth® wireless connections supported by this device, go to FAQs www.motorola.com/bluetooth.

Note: All multimedia (video player, audio player, shutter tones) will play from the speakerphone when your phone is connected to another Bluetooth device.

Turn Bluetooth® Power On or Off

Press **Menu > Settings > Connection > Bluetooth Link > Setup > Power > On**

Note: To extend battery life, use the above procedure and set Bluetooth® power to **Off** when not in use. If you turn Bluetooth® power **Off**, your phone will not connect to accessories until you turn Bluetooth® power **On** and reconnect to the accessories.

Pairing with a Headset, Handsfree Device, or PC

Before you try to connect to another Bluetooth device, make sure your phone's Bluetooth® power is **On** and the device is in *pairing mode* (see the user guide for the device). You cannot perform pairing while your phone is connected to another device.

To pair your phone to a headset accessory, handsfree car kit, or PC that supports Bluetooth® wireless connections:

Press **Menu > Settings > Connection > Bluetooth Link > Handsfree > [Look For Devices]**




4 | LEARNING TO USE YOUR PHONE

See page 1 for a basic phone diagram.

Using the Display

 The *home screen* displays when you are *not* on a call or using the menu. You must be in the home screen to dial a phone number.

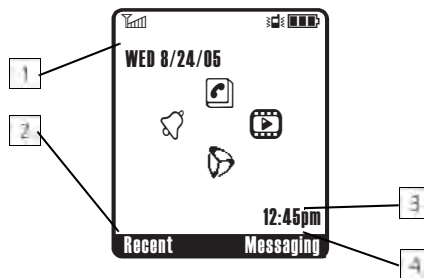


- 1 Date
- 2 Left Soft Key Label
- 3 Clock
- 4 Right Soft Key Label

Note: Because you can customize the soft key settings, your home screen soft key labels may be different than the ones shown above.

Labels at the bottom corners of the display show the current soft key functions. Press the left or right soft key to perform the function indicated by the left or right soft key label.

Your phone can display an analog or digital clock in the home screen.

 The following status indicators can display:

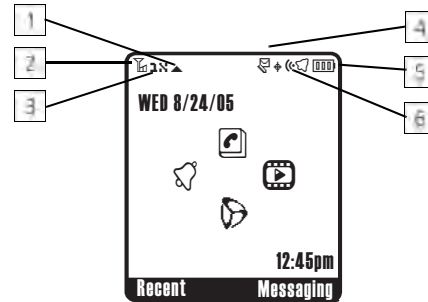

- 1 **Roam Indicator** Shows when your phone is seeking or using another network outside your home network.
- 2 **Signal Strength Indicator** Vertical bars show the strength of the network connection. You cannot make or receive calls when the (no signal) indicator or (no transmit) indicator displays.
- 3 **Data Coverage Indicator** Shows the type of data signal your phone is using:

= shows when your phone is in a 1x-RTT coverage area, access to files under 200K

= shows when your phone is in a 1x-EVDO coverage area. Broadband speeds full access to Amp'd Live™



- 4 Message Indicator** Displays when you receive a new message. Indicators can include:

= text message	= voicemail message
= voicemail and text message	

When you enter a text or picture message using the messaging feature, a number in the message entry area shows the number of characters remaining on the current page (text message) or the message size (multimedia message or letter).

- 5 Battery Level Indicator** Vertical bars show the battery charge level. Recharge the battery when **Low Battery** displays and you hear an audible battery alert.

- 6 Ring Alert Indicator** Shows alert style setting:


= loud ring	= soft ring
= vibrate	= vibrate and ring
= silent	

Using the 5-Way Navigation Key

 
Use the **5-Way Navigation Key** to scroll up, down, left, or right through the menu system, highlight menu items, change feature settings, and play games. Press the **Center Select Key** to select a highlighted menu item.





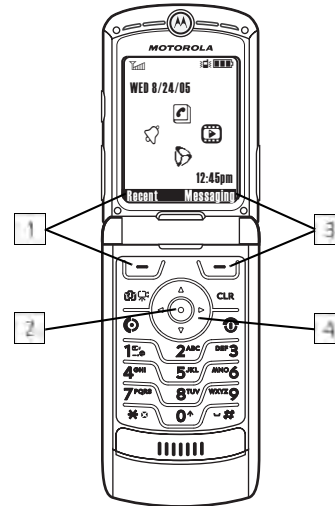




Using Menu

From the home screen, press **Menu** to enter the main menu.



- 1 Left Soft Key** Perform functions identified by left display prompt.
- 2 Center Select Key** From home screen, press to open main menu.
- 3 Right Soft Key** Perform functions identified by right display prompt.
- 4 5-Way Navigation Key** Scroll through menus and lists, set feature values. Press the **Center Select Key** to select highlighted items.

Press  to scroll to and highlight a menu feature icon in the main menu. The following icons represent features that may display in the main menu, depending on your service provider and service subscription options.

Icon	Feature	Icon	Feature
	Amp'd Live™		My Stuff
	Contacts		Recent Calls*
	Message Center*		Camera & Pics
	Settings		Tools
	Phone Info		


Note: Features marked with * are optional network/subscription dependent features.

Note: This is the standard main menu layout. **Menu organization and feature names may vary on your phone.** Not all features may be available on your phone.

Selecting a Menu Feature

 
To select a menu feature, starting from the home screen:

Press **Menu > Recent Calls > Dialed**.

This example shows that from the home screen, you must press **Menu**, scroll to and select **Recent Calls** from the main menu, then scroll to and select **Dialed**. Press  to scroll, and the left/right soft keys to select the functions displayed in the bottom left and right corners of the display.


Selecting a Feature Option

Some features require you to select an option from a list:

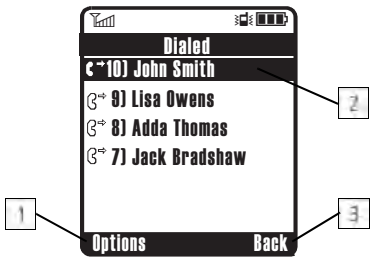


- 1 Press **Options** to open the submenu.
- 2 Highlighted option.
- 3 Press the **Back** key to return to the previous screen.

Press the **Center Select Key**  to view details of highlighted option.

Press  to scroll up or down to highlight the option you want.

In a numbered list, press a number key to highlight the option.

 
In an alphabetized list, press a key repeatedly to cycle through the letters on the key and highlight the closest matching list option.

When an option has a list of possible values, press  left or right to scroll through and select a value.

When an option has a list of possible numeric values, press a number key to set the value.

Entering Text

Some features require you to enter information.

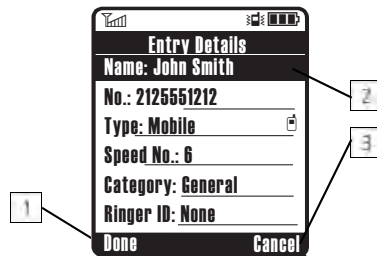

1 **Done** displays when you enter or edit information.

 
2 Highlighted option.

3 Press **Cancel** to exit without making changes.

Press **Options** > **Edit** to enter or edit information.

Press  to scroll down to other options.

The message center lets you compose and send text messages.

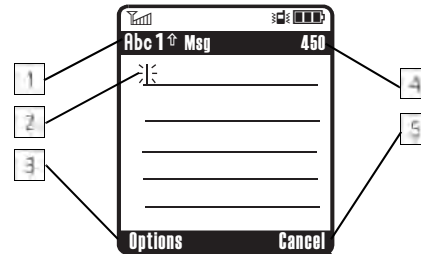

1 For indicator descriptions, see following section.

2 Flashing cursor indicates insertion point.


3 Press **Options** to open the submenu. Press **Options** > **Insert** to insert a quick note picture or sound.

4 Character counter.

5 Press **Cancel** to exit without making changes.

Choosing a Text Entry Method

Multiple text entry methods make it easy for you to enter names, numbers, and messages. The method you select remains active until you select another mode.

Press  in any text entry screen to select one of the following entry methods:

Primary	The primary text entry method (see below to set).
Numeric	Enter numbers only (see page 32).
Symbol	Enter symbols only (see page 32).


Alternatively, you can select a text entry method in any text entry screen by pressing **Options > Entry Mode**.

Setting Up a Text Entry Method

Press **Options > Entry Setup** from any text entry screen. Select **Primary Setup**, then choose:

iTAP English	Let the phone predict each word (in English) as you press keys (see page 31).
iTAP Espanol	Let the phone predict each word (in Spanish) as you press keys.
Tap	Enter letters and numbers by pressing a key one or more times.

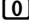


Using Capitalization

Press  in any text entry screen to change text case. The following indicators show capitalization status:

abc = no capital letters	Abc = capitalize next letter only
ABC = all capital letters	

Text Entry Method Indicators

The following indicators identify the text entry setting:

Indicator	Setting
1	Tap, no capital letters
1↑	Tap, capitalize next letter only
1↑↑	Tap, all capital letters
	iTAP, no capital letters
	iTAP, capitalize next letter only
	iTAP, all capital letters




The following indicators identify **Numeric** or **Symbol** entry method:



123 = numeric method	@ = symbol method
-----------------------------	--------------------------

Using Tap Method


This is the standard method for entering text on your phone.


Tap method cycles through the letters and numbers of the key you press.

Press	To
a keypad key 1 or more times	select a letter, number, or symbol
keypad keys	enter remaining characters Tip: Press  right to accept a word completion, or  to insert a space.
	store the text

In a text entry screen, you can press  to switch entry modes. The entry mode is displayed in the upper left corner as the  is pressed.

 When you enter text with Tap method, the soft key functions change.

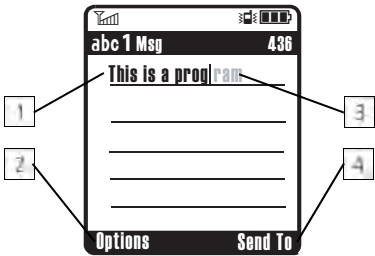

- 1 Character displays at insertion point.
- 2 Press the  key to delete character to the left of the insertion point.
- 3 After 2 seconds, character is accepted and the cursor moves to the next position.
- 4 Press **Cancel** to exit without making changes.

Character Chart

Use this chart as a guide for entering characters with Tap method.

1	. ? ! , @ ' - _ : ; () & " ~ 1 0 ç i % £ \$ ¥ ¤ € + x *
2	a b c 2
3	d e f 3
4	g h i 4
5	j k l 5
6	m n o 6
7	p q r s 7
8	t u v 8
9	w x y z 9
0	change text case, for capital letters
*	change text entry method (hold for default)
#	enter a space (hold to enter a return)

Note: This chart may not reflect the exact character set available on your phone. In a URL editor, **1** first shows common characters for that editor.

Tap Method Text Entry Rules

 
- Press a keypad key repeatedly to cycle through its characters.
- Press **↶** left or right to move the flashing cursor to the left or right in a text message.
- The first character of every sentence is capitalized. If necessary, press **↷** down to force the character to lowercase before the cursor moves to the next position.

- If you enter or edit information and do not want to save the changes, press **⌫** to exit without saving.

Using iTAP™ Method

iTAP software provides a predictive text entry method that lets you enter a word using 1 key press per letter. This can be faster than Tap method, because your phone combines the key presses into common words.


For example, if you press **7 7 6 4**, letter combinations that match your keypresses display:

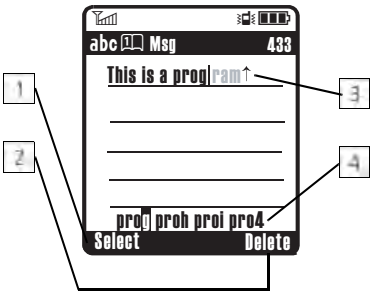


- 1** Press **Select** to lock highlighted combination.
- 2** Press **Delete** to delete the last letter.
- 3** Press **↶** up to accept **Program**.
- 4** Press **↶** right to highlight another combination. Press **⌫** to enter **Prog** and a space.


If you want a different word (such as Progress), continue pressing keypad keys to enter the remaining characters.

Entering Words

In a text entry screen, you can press  to switch entry methods. An indicator shows which method is active (see page 29).

- 1. Press keypad keys (1 press per letter) to show possible letter combinations at the bottom of the display.
- 2. Press  left or right to highlight the combination you want.
- 3. Press **Select** key to lock a highlighted combination. You can press keypad keys to add more letters to the end of the combination.


-or-

Press  to enter the highlighted combination when it spells a word.
A space is automatically inserted after the word.

If you enter a word your phone does not recognize, the phone stores it to use as one of your word options. When you fill memory space for unrecognized words, your phone deletes the oldest words to add new words.

Using Numeric Method


In a text entry screen, press  to switch entry methods until the **123** (numeric) indicator displays.

Press keypad keys to enter the numbers you want. When you finish entering numbers, press  to switch to another entry method.

Using Symbol Method

In a text entry screen, press  to switch entry methods until the **@**(symbol) indicator displays.

- 1. Press keypad keys (1 press per symbol) to show possible symbol combinations at the bottom of the display.

- 2. Press  left or right to highlight the combination you want.
- 3. Press **Select** key to lock a highlighted combination. You can press keypad keys to add more symbols to the end of the combination.


-or-

Press  enter the highlighted combination.

Symbol Chart

Use this chart as a guide for entering characters with symbol method.

1	. ? ! , @ ' - _ : ; () & " ~ 1 0 ¿ ¡ % £ \$ ¥ ¢ € + x * / \ [] = > < # §
2	@ _ \
3	/ : ;
4	" & '
5	() [] { }
6	¿ ¡ ~
7	< > =
8	\$ £ ¥ ¢ €
9	# % *
0	+ - x * / = > < # §
*	change text entry method (hold for default)
#	enter a space (hold to enter a return)

Note: This chart may not reflect the exact character set available on your phone. In a URL editor,  first shows common characters for that editor.

Deleting Letters and Words

Place the cursor to the right of the text you want to delete, then:

1. Press the **CLAR** key to delete 1 letter at a time.
2. Hold the **CLAR** key to delete all the text, 1 word at a time.

Using the External Display

When the flip is closed, you can use the external display for the following:

- View time, date, and phone status information.
- Read messages that notify you of incoming calls and other events.
- Use the external display as a viewfinder when you take a self portrait with the phone's camera.
- When you use a Bluetooth® headset for speech recognition, view speech-activated dialing commands and other status information.

Using a Removable Memory Card

Note: See page 8 for instructions on inserting and removing a memory card.

Note: You should format a memory card before you can use it.

You can use an optional removable memory card with your phone to store additional multimedia objects such as photos, video clips, and graphics.

Memory Card Tips

- File names for multimedia objects must be less than 12 characters.
- Do not remove the memory card while reading or writing files. Otherwise, the card may be damaged.

- The memory card is recognized as removable memory when connected to a personal computer.
- When you disconnect the phone with the memory card from a personal computer, remove the USB storage equipment on your personal computer. Otherwise, files stored on the memory card could be damaged.

Managing a Memory Card

To manage an inserted memory card:

Press **Menu** > **Phone Status** > **Storage Devices**.

1. Press **⬅** to scroll to the memory card.
Note: Phone memory is always listed last.
2. Press **Details** key to view memory card information.
-or-
Press **Menu** to open the Storage Device menu to perform other procedures (see the table below)

The Storage Device menu can include the following options:

Option	Description
Format	Format the memory card.

Formatting the Memory Card

It is recommended that you format the memory card before you attempt to store any multimedia objects on it.

Note: Formatting the memory card will erase any data already on the card.

1. With the phone powered off, insert the memory card into the phone (see page 8).
2. Turn on the phone.



3. When the phone is completely powered on, press **Menu**.
4. Scroll to **Phone Status** and press the **Select** key.
5. Scroll to **Storage Devices** and press the **Select** key.
6. Scroll to **Trans T-Flash** and press the **Options** key.
7. Scroll to **Format** and press the **Select** key.
The phone displays Formatting will erase all data.
8. Press the **Yes** key to begin formatting the memory card.
-or-
Press the **No** key to exit without formatting the card.

Storing Multimedia Objects

When a memory card is inserted into your phone, you must select the card before you can store objects to or access objects on it. Use the Switch Storage Device option in the Pictures Menu, Videos Menu, or Tones & Graphics Menu.

Viewing Memory Card Contents

To view the contents of an inserted memory card:

Press **Menu > My Stuff**

-or-

Press **Menu > Camera & Pics**.

1. Scroll to and select the desired multimedia object time (Pictures, Tones & Graphics, or Videos).
2. Press **Menu** to open the menu for the selected multimedia object.
3. Scroll to and select **Switch Storage Devices**.
4. Scroll to and select **TRANS-T-Flash**.

Using the Handsfree Speaker

When you activate your phone's built-in handsfree speaker, you can talk to the other party without holding the phone to your ear.

Press the upper left smart key to turn the handsfree speaker on or off during a call. A soft audio alert confirms activation/deactivation.

When you turn the handsfree speaker on, your phone displays **Speaker On** in the home screen. The handsfree speaker remains on until you press the speakerphone key again or turn the phone off.

Note: The handsfree speaker is disabled when you connect your phone to a handsfree car kit or headset accessory.

Turning On Airplane Mode

Note: Consult airline staff about the use of Airplane Mode in flight. Turn off your phone whenever instructed to do so by airline staff.

Airplane Mode allows you to disable your phone's radio frequency functions and still use other applications (such as the calculator or datebook functions). This may enable you to use these applications while on an airplane.

Press **Menu > Tools > Airplane Mode**.

Changing a Code, PIN, or Password

Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset these codes before you receive your phone.

If your service provider has not reset these codes, we recommend that you change them to prevent others from accessing your personal information. The unlock

code must contain 4 digits, and the security code must contain 6 digits.

To change a code or password:

Press **Menu > Settings > Security > New Passwords**.

Locking and Unlocking Your Phone


You can lock your phone manually or set the phone to lock automatically whenever you turn it off.

To use a locked phone, you must enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, **but you must unlock it to answer**.

You can make emergency calls on your phone even when it is locked.

Locking Your Phone Manually


Press **Menu > Settings > Security > Phone Lock > Lock Now**.

1. Press keypad keys to enter your unlock code.
2. Press the **Center Select Key**  to lock the phone.

Unlocking Your Phone

Your phone's unlock code is originally set to 1234. Your service provider may reset the unlock code to the last 4 digits of your phone number.


At the **Enter Unlock Code** prompt:

1. Press keypad keys to enter your unlock code.
2. Press the **Center Select Key**  to unlock your phone.

Setting Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

Press **Menu > Settings > Security > Phone Lock > Automatic Lock > On**.

1. Press keypad keys to enter your unlock code.
2. Press the **Center Select Key**  to activate automatic lock.

If You Forget a Code or Password


Your phone's 4-digit unlock code is originally set to 1234, and the 6-digit security code is originally set to 000000. Your service provider may reset the unlock code to the last 4 digits of your phone number before you receive your phone.

If you forget your unlock code, try entering 1234 or the last 4 digits of your phone number. If that does not work, contact your service provider.

If you forget your security code or call barring password, contact your service provider.

5 | SETTING UP YOUR PHONE

Storing Your Name and Phone Number

To view your phone number, go to **Menu > Phone Status > My Tel. Number**
-or-
from the home screen press **CLR** then .



Setting an Alert Style

Your phone rings or vibrates to notify you of an incoming call or other event. This ring or vibration is called an *alert*.

You can select 1 of 5 different alert styles: **Loud, Soft, Vibrate, Vibe then Ring, Silent**. The alert style indicator in the display shows the current alert style.

To set an alert style:

Press **Menu > Settings > Ring Styles**.

1. Press  to scroll to **Style**.
2. Press **Change** key to access the list of alert styles.
3. Press  to scroll to the desired alert style.
4. Press **Select** key to select the alert style.

Each alert style contains settings for specific event alerts, ringer ID, and ringer and keypad volume. To change these settings, press **Menu > Settings > Ring Styles > style Detail**.

Note: When your phone is connected to a charger or other accessory, the call ringer defaults to **Loud** and uses the current **Loud Detail** setting.

Setting Answer Options

You can use additional methods for answering calls:






Press **Menu > Settings > In-Call Setup > Answer Options**.

Option	Description
Multi-key	answer by pressing any key
Open to Answer	answer by opening the flip

Setting a Wallpaper Image

You can set the same photo, picture, or animation as a wallpaper (background) image on your phone's home screen and external display.

Press **Menu > Settings > Personalize > Wallpaper**.

1. Press  to scroll to **Picture**.
2. Press **Change** key to open the picture viewer.
3. Press  up or down to scroll to a picture, animation, or photo.
Scroll to **(None)** to turn off the wallpaper image.
-or-
Press **Options > Switch Storage Device**, then  up or down to open the **Storage Devices** menu, scroll to and select **TRANS-T-Flash** (the removable memory card), then scroll to a picture, animation, or photo.
4. Press **Select** key to select the image.
5. Press  to scroll to **Layout**.
6. Press **Change** key to adjust the image layout.
7. Press  to scroll to **Center, Tile, or Fit-to-screen**.



8. Press **Select** key to confirm the layout setting.
9. Press **Back** key to save wallpaper settings.

Tip: Set the resolution to the **Low** setting on your camera when taking pictures to be applied as wallpaper. Low resolution photos display best when applied as **Fit-to-Screen** as wallpaper.



Setting a Screen Saver Image

Set a photo, picture, or animation as a screen saver image.


The screen saver image displays when the phone is on and no activity is detected for a specified time. An animation repeats for 1 minute, then the first frame of the animation displays.


Tip: Turn off the screen saver to extend battery life.


Press **Menu** > **Settings** > **Personalize** > **Screen Saver**.

1. Press  to scroll to **Picture**.
2. Press **Change** key to open the picture viewer.
3. Press  up or down to scroll to a picture, animation, or photo. Scroll to **(None)** to turn off the screen saver image.

-or

Press **Options** > **Switch Storage Device**, then  up or down to open the **Storage Devices** menu, scroll to and select **TRANS-T-Flash** (the removable memory card), then scroll to a picture, animation, or photo.

4. Press **Select** key to select the image.
5. Press  scroll to **Delay**.
Note: Setting **Delay** to **Off** disables the screen saver feature.
6. Press **Change** key to set the delay interval.

7. Press  to scroll to the inactivity interval that triggers the screen saver.
8. Press **Select** key to confirm the delay setting.
9. Press **Back** key to save the screen saver settings.

Setting Display Contrast

Press **Menu** > **Settings** > **Initial Setup** > **Contrast**.

Setting Display Brightness

Press **Menu** > **Settings** > **Initial Setup** > **Brightness**.

Adjusting the Backlight

Set the amount of time that the display and keypad backlights remain on.

Press **Menu** > **Settings** > **Initial Setup** > **Backlight**.

Conserving Battery Power

Some networks and phones include a battery save setting to extend battery life. When this feature is activated, your phone automatically turns off the keypad backlight when it detects that enough ambient light is available.

Press **Menu** > **Settings** > **Initial Setup** > **Battery Save**.

6 | CALLING FEATURES




For basic instructions on how to make and answer calls, see page 7.

Changing the Active Line

Change the active phone line to make and receive calls from your other phone number.

Press **Menu** > **Phone Status** > **Active Line**.

Redialing a Number

1. Press  to view the Recent Calls list.
2. Press  to scroll to the entry you want to call.
3. Press  to redial the number.

Using Automatic Redial


When you receive a busy signal, your phone displays **Call Failed, Number Busy**.

With automatic redial, your phone automatically redials the number for 4 minutes. When the call goes through, your phone rings or vibrates¹ time, displays **Redial Successful**, and then connects the call.

You must turn on automatic redial to use the feature. To turn automatic redial on or off:

Press **Menu** > **Settings** > **Initial Setup** > **Auto Redial**.

When automatic redial is turned off, you can manually activate the feature to redial a phone number. When you hear a fast busy signal and see **Call Failed**:

Press  or **RETRY** key to activate automatic redial.

Turning Off a Call Alert


You can turn off your phone's incoming call alert before answering the call.

Press either volume key to turn off the alert for a current incoming call.

Calling an Emergency Number

Your service provider programs 1 or more emergency phone numbers, such as 911, that you can call under any circumstances, even when your phone is locked.


Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.


1. Press keypad keys to dial the emergency number.
2. Press  call the emergency number.

Viewing Recent Calls

Your phone keeps lists of the calls you recently received and dialed, even if the calls did not connect. Lists are sorted from newest to oldest entries. Oldest entries are deleted as new entries are added.

Press **Menu** > **Recent Calls**.

Shortcut: Press  from the home screen to view the recent calls list.

1. Press  to scroll to **Received Calls** or **Dialed Calls**.
2. Press **Select** key to select the list.
✓ means the call connected.

- Press to call the entry's number.
Press to send the number as DTMF tones during a call.
-or-
Press **View** key to view entry details.
-or-
Press **Menu** to open the **Last Calls Menu** to perform various operations on the entry.

The **Last Calls Menu** can include the following options:

Option	Description
Store	Create a Contacts entry with the phone number in the No. field.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Send Message	Open a new text message with the number in the To field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from Contacts or the Recent Calls lists.

Returning an Unanswered Call

Your phone keeps a record of your unanswered calls, and displays:

- the (missed call) indicator
 - X Missed Calls**, where **X** is the number of missed calls
- Press **Select** key to see the received calls list.
 - Press to select a call to return.
 - Press to make the call.

Using the Notepad

The most recent set of digits entered on the keypad are stored in your phone's notepad memory. This can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

Press **Menu** > **Recent Calls** > **Notepad**.

- Press to call the number.
-or-
Press **Options** to open the **Dialing Menu** to attach a number or insert a special character.
-or-
Press **Store** key to create a **Contacts** entry with the number in the **No.** field.

Attaching a Number

While dialing (with digits visible in the display):

Press **Options** > **Attach Number** to attach a number from the **Contacts** or **Recent Calls** lists.

Calling with Speed Dial

Each entry you store in **Contacts** is assigned a unique speed dial number.

You can change an entry's speed dial number.

To see an entry's speed dial number, press **Menu** > **Contacts**, scroll to the entry, and press the **View** key.

To speed dial a **Contacts** entry:

- Press keypad keys to enter the speed dial number for the entry you want to call.
- Press to submit the number.
- Press to call the entry.

Calling with 1-Touch Dial

To call **Contacts** entries 1 through 9, press and hold the single-digit speed dial number for 1 second.

Using Voicemail

Voicemail messages that you receive are stored on the network. To listen to your messages, you must call your voicemail phone number.


Your service provider may include additional information about using this feature.

Listening to Voicemail Messages

Press **Menu** > **Messaging** > **Voicemail** > **CALL**.

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Receiving a Voicemail Message

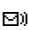When you receive a voicemail message, your phone displays the  (voicemail message) indicator and a **New Voicemail** notification.

Press **CALL** key to listen to the message.

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

Muting a Call



1. Press **MUTE** key.

Using DTMF Tones

You can send numbers to the network as dual tone multi-frequency (DTMF) tones during a call. Use DTMF tones to communicate with automated systems that require you to submit a PIN code, password, or credit card number.

To set DTMF tones to be long, short, or off:


Press **Menu** > **Settings** > **Initial Setup**.

1. Press  to scroll to **DTMF**.
2. Press **Change** key to access the list of DTMF options.
3. Press  to scroll to the desired options.
4. Press **Select** key to select the DTMF option.

Short sends a short, fixed-duration tone for each key you press. **Long** sends each tone for as long as you press the key. Some systems (such as home answering machines) may require long tones for proper activation.


Sending DTMF Tones During a Call

Using the Keypad

1. Press keypad keys to enter a number to send.
2. Press **Options** to open the **Call Menu**.
3. Press  to scroll to **Send Tones**.
4. Press **Select** key to send the number to the network as DTMF tones.

Sending a Stored Number

During a call, highlight a number in **Contacts** or the **Recent Calls** lists, then:

Press  to make the call.



7 | PHONE FEATURES

Menu Map


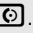
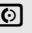
Contents of the Main Menu		Contents of the Settings Menu	
Amp'd Live™ My Stuff Music Video Games & Applications Tones & Graphics Subscriptions My Account Contacts Recent Calls Received Dialed Notepad Call Times Data Times Data Volumes Messaging* Create Message Voicemail Inbox Outbox Quick Text Drafts Erase Messages Message Settings	Camera & Pics Camera Pictures Videos Video Camera Settings (see Contents of the Settings Menu) Tools Calculator Datebook Voice Records Alarm Clock Airplane Mode Phone Status My Tel. Number Active Line Battery Meter Storage Devices Other Information	Ring Styles Style style Detail Personalize Home Screen Main Menu Skin Greeting Wallpaper Screen Saver Sound Settings In-Call Setup In-Call Timer Answer Options Security Phone Lock Lock Application Restrict Calls New Passwords Initial Setup Time and Date Auto PIN Dial Auto Redial Display Timeout Backlight TTY Setup	Initial Setup (con't) Scroll Language Battery Save Contrast Brightness DTMF Hyphenation Master Reset Master Clear Network Info Current Network Set Mode Service Tone Call Drop Tone Car Settings Auto Answer Auto Handsfree Power-off Delay Charger Time Headset Auto Answer Voice Dial Location Location On 911 Only Connection Bluetooth Link Incoming Call USB Settings

*Optional network/subscription dependent feature.


This is the standard main menu layout. Menu organization and feature names may vary on your phone. Not all features may be available on your phone.




Calling Features

Feature	Description
Conference Call	During a call: Dial next number, press  , press  . When the second call connects, press  again.
Restrict Calls	Restrict outgoing or incoming calls: Menu > Settings > Security > Restrict Calls > <i>unlock code</i>


Messaging

Feature	Description
Send Text Message	Send a text message: Menu > Messaging > Create Message > New TXT Message
Send Multimedia Message	Send a multimedia message: Menu > Messaging > Create Message > New PIX Message
Use Media Template	Open an MMS template with preloaded media: Menu > Messaging > Create Message > PIX Templates
Read Message	Read a new text or multimedia message that you have received: Press the READ key. When you view a video clip in a multimedia message that does not contain text, pressing  right may display a blank screen or restart the video clip.
Store Message Objects	Go to a multimedia message slide, or highlight an object in a letter, then: Options > Store File names for stored multimedia objects can not exceed 36 characters.
Quick Text	Send or create a prewritten message: Menu > Messaging > Quick Text



Feature	Description
Sent Messages	View sent messages: Menu > Messaging > Outbox
Received Messages	Read received messages: Menu > Messaging > Inbox Press Options to perform various operations on the message. When you view a video clip in a multimedia message that does not contain text, pressing  right may display a blank screen or restart the video clip.
Drafts	View messages saved in the drafts folder: Menu > Messaging > Drafts
Erase Messages	Delete all messages or only messages from the Outbox or drafts folder: Menu > Messaging > Erase Messages

Contacts

Feature	Description
Create Entry	Create a new Contacts entry: Menu > Contacts Options > New > Phone Number or Email Address You can store up to 1000 Contacts entries.
Create Group Mailing List	Create a group mailing list as a Contacts entry: Menu > Contacts Options > New > Mailing List
Dial Number	Call a number stored in Contacts : Menu > Contacts , highlight the entry, press  to call

Feature	Description
Voice Dial Number	Voice dial a number stored in Contacts : With phone flip open, press and release the voice key, and say the entry's name (within 2 seconds) exactly as it is stored in Contacts .
Change Speed Dial Number for Entry	Assign a distinctive ringer alert to a Contacts entry: Menu > Contacts > entry Options > Edit > Speed No
Set Ringer ID for Entry	Assign a distinctive ringer alert to a Contacts entry: Menu > Contacts > entry Options > Edit > Ringer ID > ringer name
Set Picture ID for Entry	Assign a picture to display when you receive calls from an entry: Menu > Contacts > entry Options > Edit > Picture > picture
Set Picture ID View	View Contacts entries as text list, or with picture caller ID photos: Menu > Contacts Options > Setup > View by > List or Picture
Set Category for Entry	Set the category for a Contacts entry: Menu > Contacts > entry Options > Edit > Category > category name
Set Category View	View Contacts entries as text list, or with picture caller ID photos: Menu > Contacts Options > Categories > category type
Sort Contacts List	Set the order in which Contacts entries are listed: Menu > Contacts Options > Setup > Sort by > sort order



Feature	Description
Set Primary Number	Set the primary number for a Contacts entry with multiple numbers: Menu > Contacts > entry Options > Set Primary > phone number
View Primary or All Numbers	Set to view only primary numbers or all numbers when viewing entries: Menu > Contacts > entry Options > Setup > View > All Contacts or Primary Contacts
Edit Entry	Edit a Contacts entry: Menu > Contacts > entry Options > Edit
Delete Entry	Delete a Contacts entry: Menu > Contacts > entry Options > Delete
Copy Contacts Entry	Copy a Contacts entry to another location in Contacts : Menu > Contacts > entry Options > Copy Entry > location number
Copy Multiple Contacts Entries	Copy multiple Contacts entries to other locations: Menu > Contacts > entry Options > Copy Entries > From[start]: > starting location number > From[end]: > ending location number > To[start]: > new starting location number



Personalizing Features

Using Speech Commands

You can place calls and perform other tasks by speaking commands to your phone.

1. *Press and release the voice button on the right side of the phone.*
*Your phone displays and speaks **Say a command**, followed by a list of speech commands.*
2. *Say 1 of the commands listed in the table below.*
Your phone performs the corresponding action.

The following are speech commands and the actions they perform:

Speech Command	Description
Call	place a call
Send Picture name	send a multimedia message to the Contacts entry whose <i>name</i> you speak
Send Text name	send a text message to a Contacts entry whose <i>name</i> you speak
Lookup name	look up a Contacts entry by speaking the entry's <i>name</i>
Go To app	use a speech shortcut to access the phone <i>app</i> (application) you specify: Voicemail, Camera, Redial, Received Calls
Check item	check the <i>item</i> you specify: <ul style="list-style-type: none">• Status—network coverage, signal strength, and battery life• Signal—network signal strength• Network—network your phone is currently using• Battery—battery charge level• My Phone Number—view your phone number



Use the **Call** command to place a call in 2 different ways:

- Dial a **Contacts** entry by speaking the name of the entry.
 - Dial any number by speaking the digits in the number.
1. Press and release the voice button on the right side of the phone.
You phone displays **Say a command**, followed by a list of speech commands.
 2. Say "Call," then say the name of the **Contacts** entry, or speak the digits of the phone number.
 - For example, to call the mobile number for a **Contacts** entry named Bill Smith, you would say "Call Bill Smith mobile." (If the entry included only 1 number for Bill Smith, you would simply state "Call Bill Smith.")
 - Similarly, to call the phone number 312-555-1212, you would say "Call 312-555-1212."
If the phone recognizes the name or number, it places the call.
 - If the phone asks you to repeat a name or number, say it again. If the name or number is not valid or is not recognized, the phone does not place the call.
 - If the phone does not recognize the name or number, it displays a list of up to 3 names or numbers, asks, "Did you say ...," and highlights that first item in the list.
 - If the name or number is correct, say "Yes" to place the call.
 - If the name or number is not correct, say "No" to go to the next item on the list.
 - To select the name or number manually, scroll to the name or number on the list and press the **Select** key.
 - To exit the list, say "Cancel."
 - If you reach the end of the list without confirming a number, the phone says, "Sorry, no match found." To try to place the call again, press the **Repeat** key, say "Call," and clearly speak the name or number.

Tip: Speak numbers at a normal speed and volume, pronouncing each digit distinctly. Avoid pausing between digits.



Additional Personalizing Features

Feature	Description
Ring Style	Change the ring alert for an event: Menu > Settings > Ring Styles > <i>style</i> Detail > <i>event name</i>
Ringer IDs	Activate distinctive ring alerts assigned to Contacts entries: Menu > Settings > Ring Styles > <i>style</i> Detail > Ringer IDs
Ring Volume	Set ringer volume: Menu > Settings > Ring Styles > <i>style</i> Detail > Ring Volume
Keypad Volume	Set keypad keypress volume: Menu > Settings > Ring Styles > <i>style</i> Detail > Key Volume
Clock View	Display an analog clock or digital time readout in the home screen: Menu > Settings > Personalize > Home Screen > Clock
Skin Appearance	To choose a phone <i>skin</i> that sets the look and feel of your phone's display: Menu > Settings > Personalize > Skin
Change Soft Keys	Change soft key labels and menu feature icons in the home screen: Menu > Settings > Personalize > Home Screen > Home Keys
Keypad Scrolling Sounds	Menu > Settings > Personalize > Sound Settings > Scroll Tone



Menu Features


Feature	Description
Language	Set menu language: Menu > Settings > Initial Setup > Language
Menu View	Display the main menu as graphic icons or as a text-based list: Menu > Settings > Personalize > Main Menu > View
Main Menu	Reorder your phone's main menu: Menu > Settings > Personalize > Main Menu > Reorder
Show or Hide Menu Icons	Show or hide menu feature icons in the home screen: Menu > Settings > Personalize > Home Screen > Home Keys > Icons
Master Reset	Reset all options except unlock code, security code, and lifetime timer: Menu > Settings > Initial Setup > Master Reset To reset all options, you need to enter the Security Code (000000).
Master Clear	Reset all options except unlock code, security code, and lifetime timer, and clear all user settings and entries: This option erases all user-entered information stored in your phone memory, including Contacts entries and downloaded files. Once you erase the information, it cannot be recovered. It resets all options back to their factory settings except for the unlock code, security code, and lifetime timer. Menu > Settings > Initial Setup > Master Clear To clear all information, you need to enter the Security Code (000000).



Dialing Features

Feature	Description
Auto PIN Dial	Some networks require an authenticating PIN code to allow outgoing calls. Use this feature to automatically dial your PIN code. Menu > Settings > Initial Setup > Auto PIN Dial

Call Monitoring

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

Feature	Description
Call Times	View call timers: Menu > Recent Calls > Call Times
In-Call Timer	Set a timer to beep at selected intervals during a call, and display time information during a call: Menu > Settings > In-Call Setup > In-Call Timer



Handsfree Features

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Feature	Description
Accessory Volume Settings (car kit or headset)	Adjust volume of headsets or car kit accessories that are enabled for Bluetooth® connections: During an active call, press your phone's up or down volume key.
Speaker- phone Automatic Off	Set the speakerphone feature to disable itself 20 seconds after end of call: Menu > Settings > Initial Setup > SpeakerPhone
Auto Answer (car kit or headset)	Automatically answer calls when connected to a car kit or headset: Menu > Settings > Car Settings or Headset > Auto Answer
Voice Dial (headset)	Enable voice dial with headset send/end key: Menu > Settings > Headset > Voice Dial
Auto Handsfree (car kit)	Automatically route calls to a car kit when connected: Menu > Settings > Car Settings > Auto Handsfree
Power-Off Delay (car kit)	Set the phone to stay on for a specified time after the ignition is switched off: Menu > Settings > Car Settings > Power-off Delay
Charger Time (car kit)	Charge the phone for a specified time after the ignition is switched off: Menu > Settings > Car Settings > Charger Time

Data and Fax Calls

Feature	Description
Send Data or Fax	Connect your phone to the device, then place the call through the device application.
Receive Data or Fax	Connect your phone to the device, then answer the call through the device application.



Bluetooth® Wireless Connections



Feature	Description
Make Phone Visible to Other Device	<p>Allow an unknown Bluetooth device to discover your phone:</p> <p>Menu > Settings > Connection > Bluetooth Link > Setup > Find Me</p> <p>Tip: After the first connection, you do not need to select Find Me to reconnect.</p>
Connect to Recognized Device	<p>Connect to a recognized handsfree device:</p> <p>Menu > Settings > Connection > Bluetooth Link > Handsfree > <i>device_name</i></p> <p>where <i>device_name</i> is the name of the device with which you want to connect.</p>
Connect to a Handsfree Device During a Call	<p>Switch to a headset or car kit during a call:</p> <p>Menu > Use Bluetooth</p> <p>Note: You cannot switch to a headset or car kit if you are already connected to a Bluetooth device.</p>
Disconnect From Device	<p>Disconnect from a device:</p> <p>Highlight the device name and press the DROP key.</p>
Edit Device Properties	<p>Edit the properties of a recognized device:</p> <p>Menu > Settings > Connection > Bluetooth Link > Device History > Edit</p>
Set Bluetooth Power Permanently On	<p>Set Bluetooth Power to be on whenever your phone is on:</p> <p>Menu > Settings > Connection > Bluetooth Link > Setup > Power > On</p>
Set Bluetooth Options	<p>Set your phone's Bluetooth options:</p> <p>Menu > Settings > Connection > Bluetooth Link > Setup</p>





Network Features

Feature	Description
Current Network	View information about network with which phone is currently registered: Menu > Settings > Network Info > Current Network
Set Mode	Set how your phone searches for a network connection: Menu > Settings > Network Info > Set Mode
Set Service Tones	Set phone to beep each time the network registration status changes: Menu > Settings > Network Info > Service Tone
Set Call Drop Alerts	Set phone to emit an alert tone whenever the network drops a call. (Because digital networks are so quiet, the call drop alert may be your only indication that a call has been dropped.) Menu > Settings > Network Info > Call Drop Tone

Personal Organizer Features

Feature	Description
Create Datebook Event	Create a new datebook event: Menu > Tools > Datebook , highlight the day, press the Center Select Key  , press Options > New You can store up to 1000 Datebook events.
View or Edit Datebook Event	View or edit event details: Menu > Tools > Datebook , highlight the day, press  , press the OK key
Event Reminder	View event reminder: OK key Close event reminder: Back key



Feature	Description
Copy Datebook Event	Copy a datebook event to date and/or time Menu > Tools > Datebook > day > event  Options > Copy
Set Alarm	Set an alarm: Menu > Tools > Alarm Clock
Turn Off Alarm	Turn off alarm: Press the Disable key or Options . Set 8-minute delay: Press the Snooze key.
Create Voice Memo	Create a voice memo: Press and hold voice key, speak into the phone, release voice key. Note: Recording of phone calls is subject to varying State and Federal laws regarding privacy and recording of phone conversations. Always obey the laws and regulations on the use of this feature.
Play Voice Memo	Play back a voice memo: Menu > Tools > Voice Memos > voice memo
Calculator	Calculate numbers: Menu > Tools > Calculator
Currency Converter	Convert currency: Menu > Tools > Calculator Options > Exchange Rate Enter exchange rate, press the  key, enter amount, and press Options > Convert Currency .

Security

Feature	Description
Lock Application	Lock phone applications: Menu > Settings > Security > Lock Application

News and Entertainment

Feature	Description
Manage Pictures	Manage pictures, animations, and photos: Menu > Camera & Pics > Pictures To access images stored on the removable memory card, press Options to open the Pictures Menu , scroll to and select Switch Storage Devices , then scroll to and select TRANS-T-Flash .
Manage Tones & Graphics	Manage ring tones and tones & graphics that you have composed or downloaded: Menu > My Stuff > Tones & Graphics
Manage Video Clips	Manage video clips: Menu > Camera & Pics > Videos To access video clips stored on the removable memory card, press Options to open the Videos Menu , scroll to and select Switch Storage Devices , then scroll to and select TRANS-T-Flash .



8 | SERVICE AND REPAIRS

If you have questions or need assistance, we're here to help. Go to www.motorola.com/consumer/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).



9 | SPECIFIC ABSORPTION RATE DATA

The model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. See the printed *Important Safety and Legal Information* guide or <http://www.motorola.com/rfhealth> for SAR values.²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site: <http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site: <http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

INDEX

A

- accessories 5
- accessory connector port 1
- alarm clock 54
- alert
 - setting 7, 48
 - turning off 7, 38
- animation
 - screen saver 37
 - viewing 55
 - wallpaper 36
- answering a call 7, 36
- application, locking and unlocking 55
- automatic redial 38

B

- backlight 37
- barring calls 42
- battery
 - charging 6
 - extending battery life 5, 37
 - installing 6
- battery save 37
- Bluetooth 52
- brightness, setting 37

C

- calculator 54
- call
 - alert, turning off 7, 38
 - answer options 36
 - answering 7
 - barring 42
 - dialed calls list 38
 - dialing 7
 - emergency number 38

- handsfree speaker 34
- making 7
- mute 40
- received calls list 38
- receiving 7
- ring style 7, 48
- timers 50
- unanswered call 39
- Call Failed, Number Busy message 38
- caller ID 44
- camera
 - taking a photo 19
- category
 - Contacts entry 44
- center key 26
- character chart 31
- clock
 - selecting analog or digital 48
- codes
 - changing 34
 - default 34, 35
 - forgetting 35
- conference call 42
- Contacts
 - attaching 2 numbers 39
 - category for entry 44
 - dialing a number 43
 - group mailing list 43
 - 1-touch dial 40
 - picture ID 44
 - primary number, setting 45
 - ringer ID 44, 48
 - sorting entries 44
 - speed dial number 39
 - storing an entry 43
 - voice dialing 44
- coverage indicator 25

INDEX

customizing the menu 49

D

- data call 51
- datebook 53
- diald calls list 38
- dialing a number 7
- display
 - backlight 37
 - brightness 37
 - description 25
 - home screen 25
 - language 49
 - personalizing 49
- distinctive ringer alert 48

E

- earpiece volume 7
- emergency number 38
- end key 1
- Enter Unlock Code message 35
- external display 33

F

- fax call 51
- 5-way navigation key 1, 26

H

- handsfree speaker 34
- headset jack 1
- home screen
 - defined 25
 - selecting clock view 48

I

- incoming call
 - answering 7
- indicators
 - coverage 25
 - message 26
 - message waiting 23
 - signal strength 25
 - text entry mode 26
 - voicemail message 26, 40

J

- joystick 1

K

- key
 - center key 26
 - end 1
 - 5-way navigation 1, 26
 - left soft key 1, 25
 - menu 1
 - power 1
 - right soft key 1, 25
 - send 1
 - voice 1
 - volume control 1, 7
- keypad
 - answering calls 36
 - volume, setting 48

L

- language, setting 49
- left soft key
 - functions 1, 25
- lock

INDEX

- application 55
- phone 35

M

- making a call 7
- master clear 49
- master reset 49
- menu
 - entering text 28
 - icons, converting to text 49
 - icons, showing or hiding 49
 - language, setting 49
 - personalizing 49
 - rearranging features 49
 - using 26
 - view, changing 49
- menu key 1
- message
 - MMS, defined 22
 - multimedia message 42
 - multimedia template 42
 - reading 42
 - text 42
- message indicator 26
- message waiting indicator 23
- MMS. *See* message
- multimedia message
 - receiving 23
 - sending 22, 42
- multimedia messaging service. *See* message
- multimedia template 42
- mute a call 40
- my telephone number 8, 36

N

- notepad 39

- number
 - storing your number 36
 - viewing your number 8

O

- 1-touch dial
 - using 40
- open to answer 36
- optional accessory, defined 5
- optional feature, defined 5

P

- passwords. *See* codes
- phone
 - alert, turning off 7, 38
 - answer options 36
 - clear stored information 49
 - codes 34
 - keypad, answering calls 36
 - language, setting 49
 - locking 35
 - open to answer 7
 - reset all options 49
 - ring style 7, 48
 - security code 34
 - unlock code 34
 - unlocking 35
- phone number
 - attaching 2 numbers 39
 - redialing 38
 - storing in Contacts 43
 - storing your number 36
 - viewing your number 8
- photo
 - picture ID 44
 - sending 19

INDEX

- taking 19
- picture
 - screen saver 37
 - viewing 55
 - wallpaper 36
- picture ID 44
 - setting 44
- power key 1

R

- received calls list 38
- recent calls 38
- redial
 - automatic redial 38
 - busy number 38
- right soft key
 - functions 1, 25
- ring alert
 - setting 7
 - turning off 7
- ring style, setting 7, 48
- ring tone
 - managing 55
- ringer ID
 - setting 44
 - turning on/off 48
- ringer volume, setting 7, 48

S

- screen saver 37
- security code
 - changing 34
 - default 34
- send key 1
- shortcuts 48
- signal strength indicator 25

- silent alert, setting 7, 48
- silent ring alert, setting 7
- soft keys
 - functions 25
 - illustration 1
- Speaker On message 34
- speakerphone
 - automatic answer 51
- speed dial 39
- standby time, increasing 37
- symbol chart 32

T

- telephone number
 - storing your number 36
 - viewing your number 8
- text
 - capitalization, changing 29
 - character chart 31
 - entering 28
 - symbol chart 32
- text entry mode indicator 26
- timers 50
- tones & graphics
 - managing 55

U

- unlock
 - application 55
 - phone 35
- unlock code
 - bypassing 35
 - changing 34
 - default 34, 35

INDEX

V

- vibrate alert
 - setting 7, 48
 - turning off 7, 38
- video clip
 - downloading 42, 43
 - managing 55
 - recording 20
- voice dial 44, 51
- voice key
 - dialing a number 44
 - illustration 1
- voice memo 54
- voicemail 40
- voicemail message indicator 26, 40
- volume
 - earpiece 7
 - keypad 48
 - ringer 7, 48
- volume keys 1, 7

W

- wallpaper 36

U.S. patent Re. 34,976

**MORE MOBILE THAN
YOU'RE USED TO.**

ampd.com



amp'd mobile™